

FS-533 Finisher

INSTALLATION MANUAL


Applied Machines: C554e/C454e/C364e/C284e/C224e/C554/C454/C364/C284/C224/C368/C308/554e/454e/364e/284e/224e

COLOR MFP: 55 ppm/45 ppm/36 ppm/30 ppm/28 ppm/22 ppm

MFP: 55 ppm/45 ppm/36 ppm/28 ppm/22 ppm


Product Code: A5AY/A5C0/A5C1/A5C2/A5C4/A2XK/A4FJ/A161/A4FK/A4FM/A7PU/A7PY/A61D/A61E/A61F/A61G/A61H

1. Accessory parts

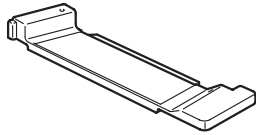
No.	Name	Shape	Q'ty
1.	Rail cover		1
2.	Mounting bracket (anti-static brush)		1
3.	Screw A (4 x 8 mm)		1
4.	Screw B (3 x 25 mm)		1
5.	Screw C (3 x 6 mm)		1
6.	Screw D (3 x 6 mm)		2
7.	Shoulder screw		1
8.	Label		1
9.	Installation manual		1 set

Note:

- This manual provides the illustrations of the accessory parts and machine that may be slightly different in shape from yours. In that case, instead of the illustrations, use the appearance of your machine to follow the installation procedure. This does not cause any significant change or problem with the procedure.
- If none of the later steps instruct you to use the parts including screw and cover that you removed following the instructions described in this manual, discard them.
- When removing the finisher from the carton, be sure to hold the finisher by the sides as shown in the illustration.

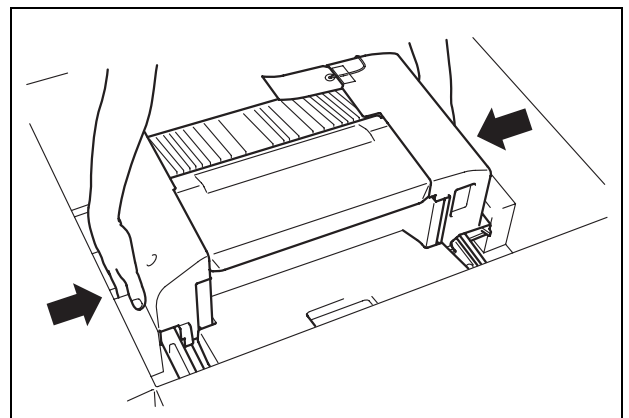

- When carrying the finisher, be sure to hold the finisher by the sides as shown in the illustration.

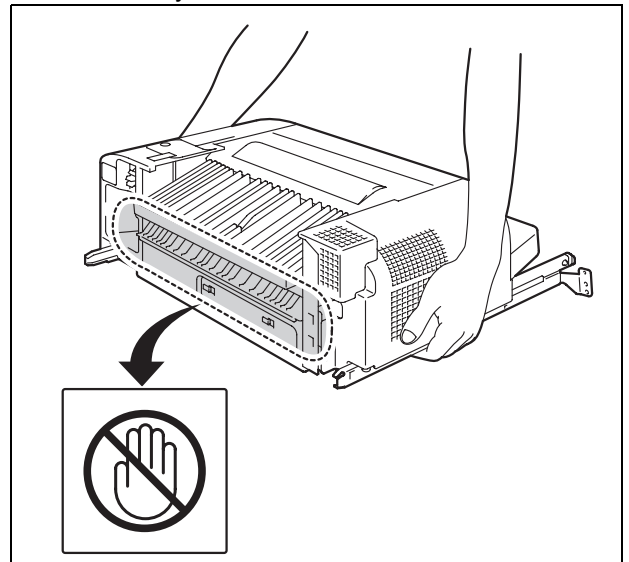

WARNING



Keep this bag away from babies and children. Do not use in cribs, beds, carriages, or playpens.




The thin film may cling to nose and mouth and prevent breathing. This bag is not a toy.

2. Installation procedures


- (1) Turn OFF the power switch and unplug the power cord from the power outlet.
- (2) Remove protective tape and protective materials and take out accessory parts.

Note:

Note that if you pull the lever after removing the protective tape from the front rail, the front rail pops out.

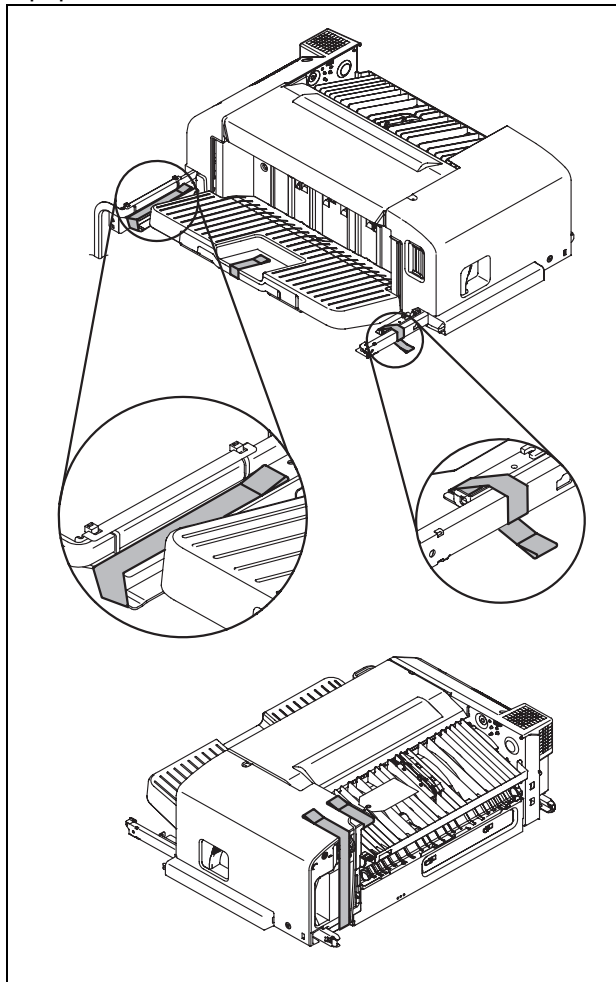


- (3) Remove the screw and the washer.

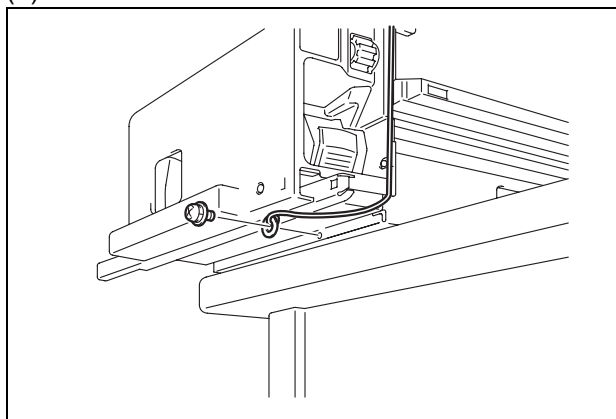

Note:

When installing this option to C554e/C454e/C554/C454/554e/454e, the following steps steps (4) to (10) are performed only if the optional output tray OT-506 is installed.

- (4) Check whether the output tray has the snap-fit hook illustrated below or not.

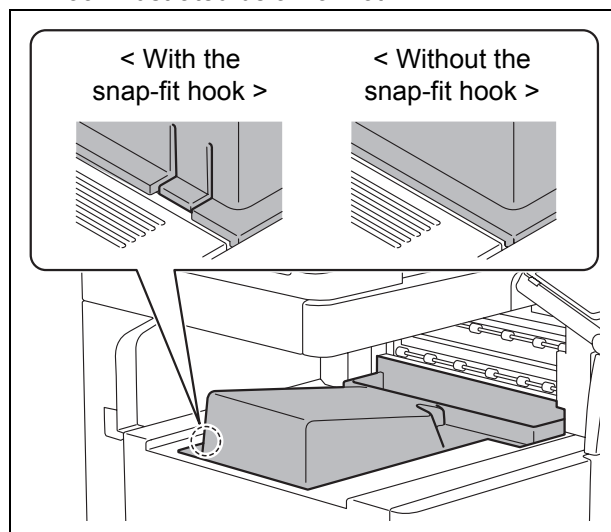


< When the machine has the snap-fit hook >

Go to step step (7).


< When the machine does not have the snap-fit hook >

Go to step step (5).

- (5) Open the front door of the main unit.
- (6) Remove the upper left cover from the main unit.
(Three screws)

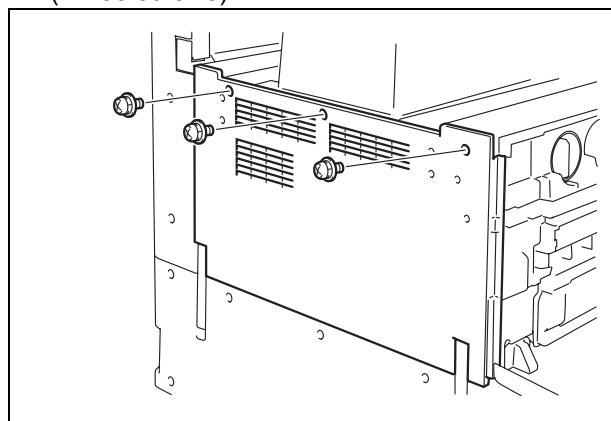


(7) Remove the output tray from the main unit.

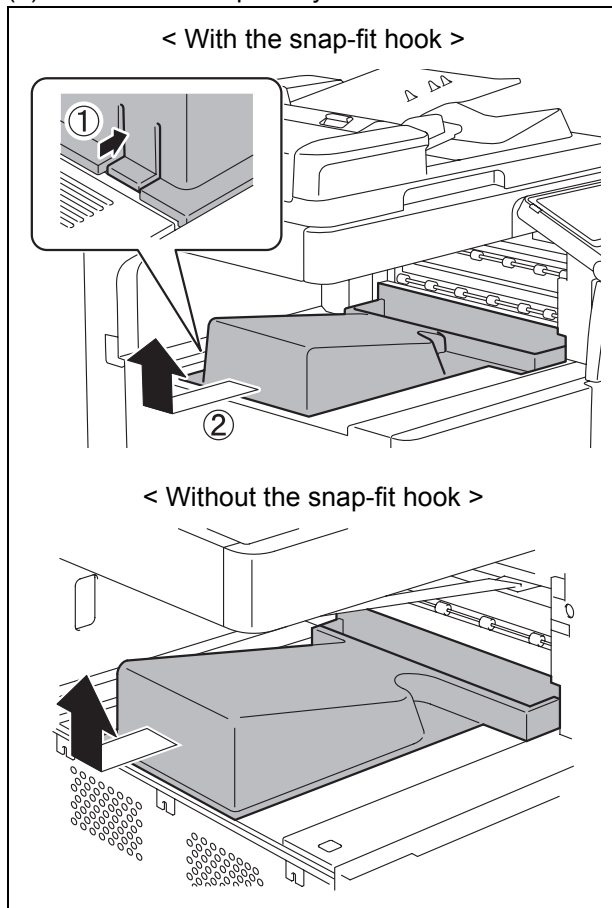


(8) Reattach the upper left cover removed in step (6) to the main unit. (Three screws)

(9) Close the front door of the main unit.


(10) Remove the guide from the main unit.

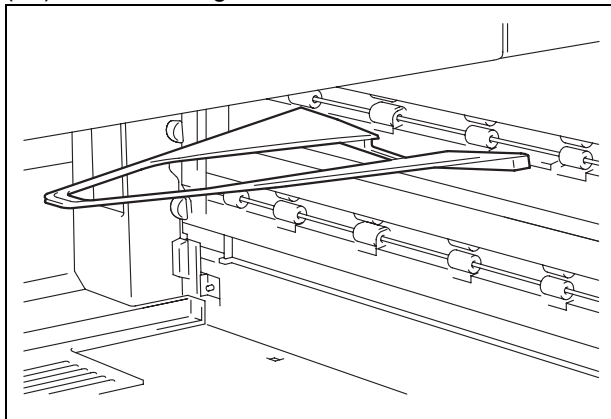

(11) Remove the cover from the main unit as shown in the illustration. (One screw)

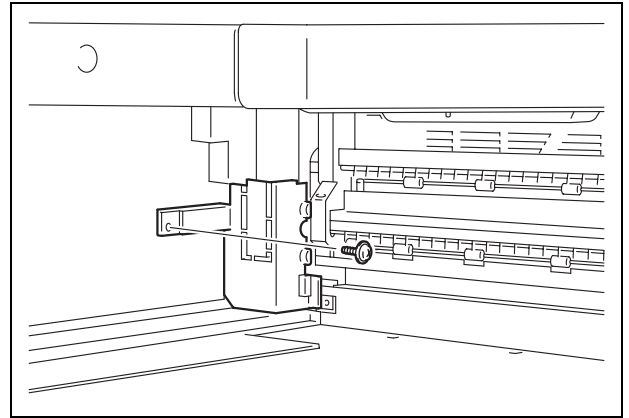


(12) Remove the rear left cover from the main unit. (Three screws)

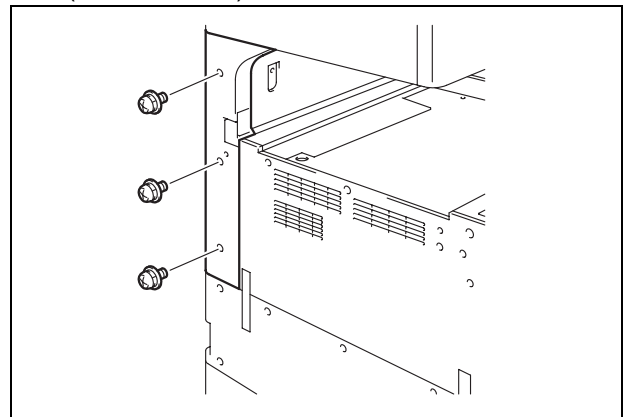


(13) Remove the knockout from the cover removed in step (12) with nippers.

Note:


Remove the part shown in the illustration only.

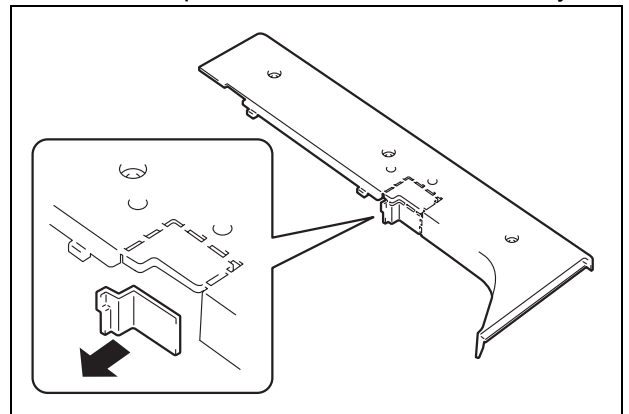

- (14) Peel the seal off the cover of the main unit as shown in the illustration.

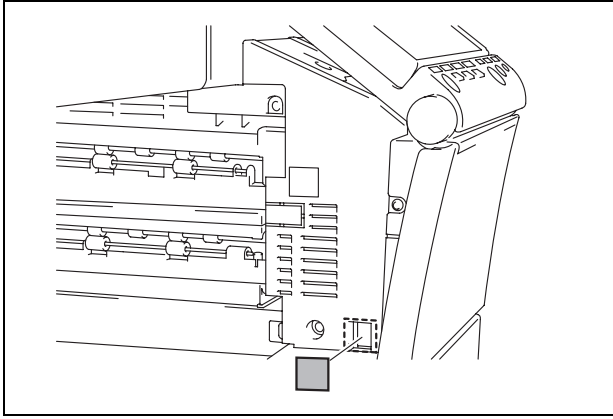


- (15) Peel the seal off the main unit.

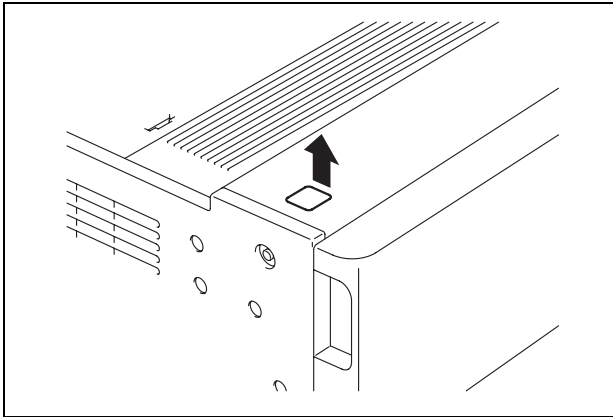


- (16) Attach the supplied mounting bracket (anti-static brush) to the finisher. (Two supplied screws D)

Note:


- Make sure not to deform the brush by touching it.
- Make sure not to touch the upper surface of the transport unit (A part) as it damages the guide plates.

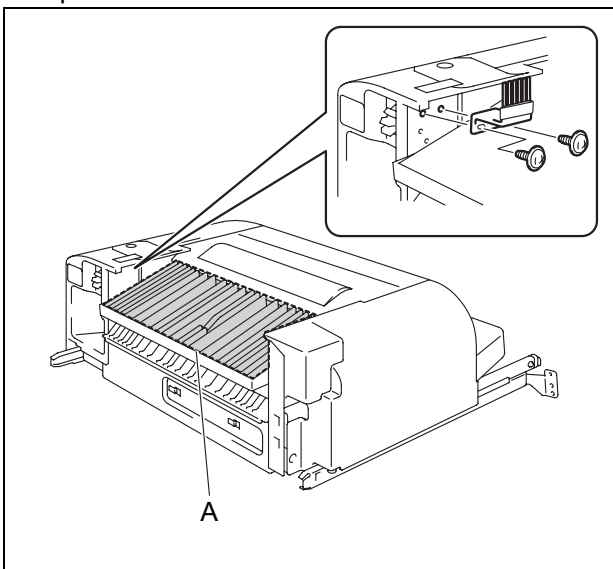


- (17) To install the finisher, follow the steps below.
a) When inserting the finisher into the main unit, be careful not to hit the exterior of the finisher against the plate located at the rear left of the main unit.

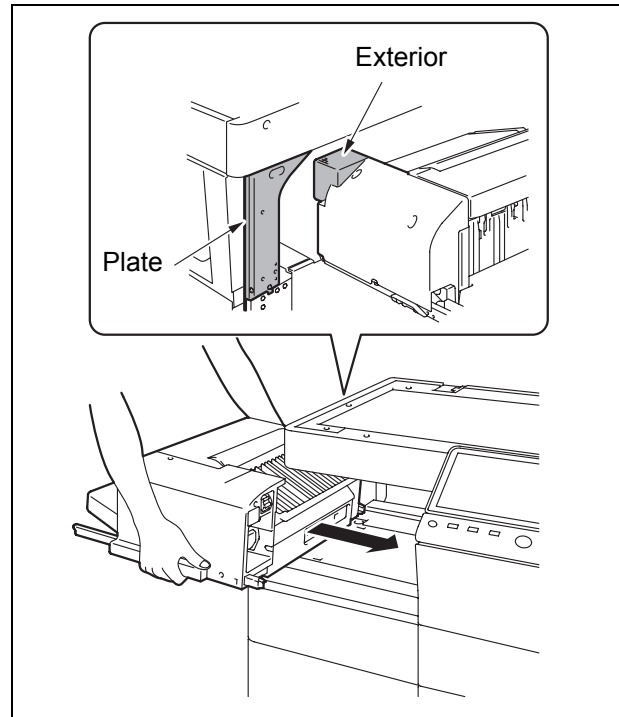

- b) Adjust the finisher's position to the right of the plate and then move the finisher to the rear of the main unit.

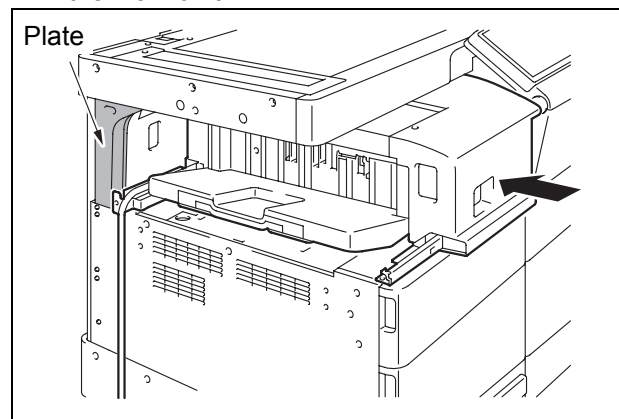


- c) By fitting the ends of the finisher's front and back rails into the main unit's rectangle holes, join the finisher to the main unit.

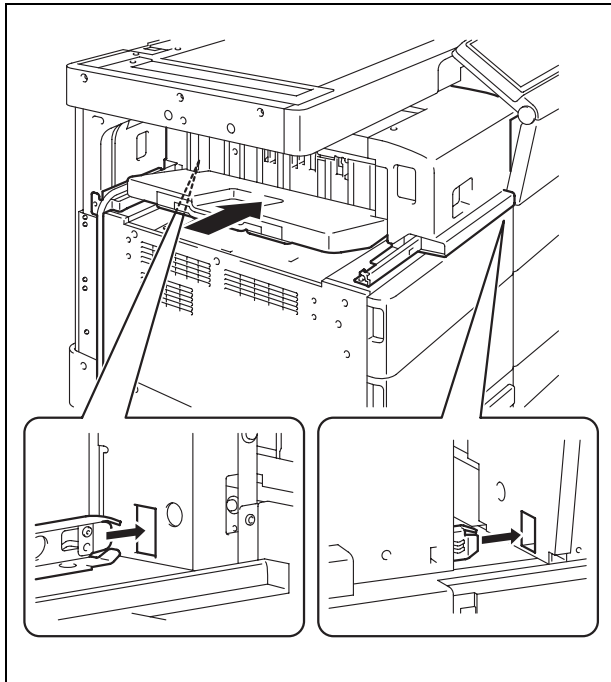


- (18) Use a rule or the like to fit the brush toward the rear as shown in the illustration.

Note:

Make sure that brush touches the aluminum sheet affixed to the bottom of the scanner unit.

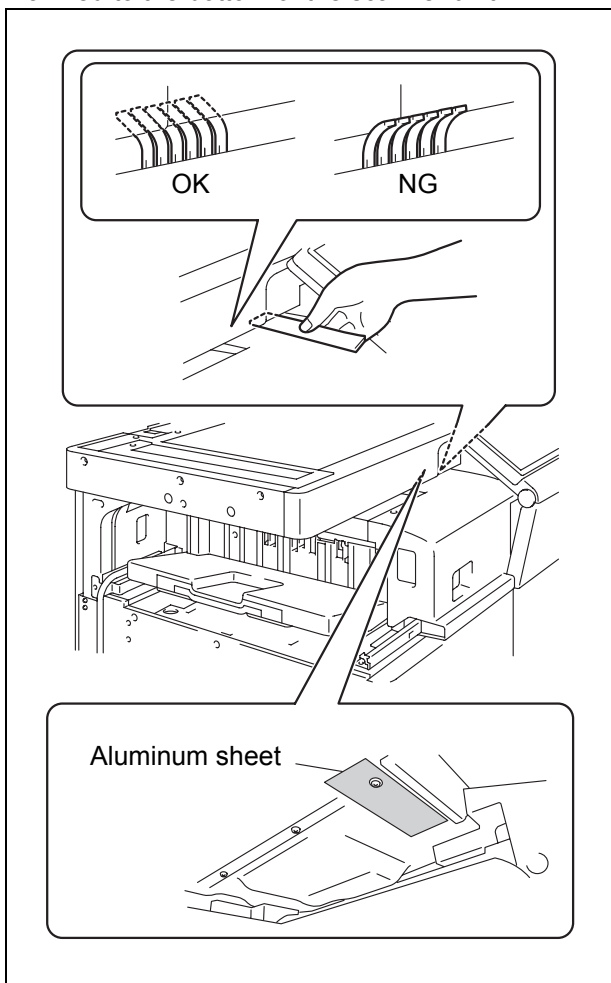

- (19) Secure the finisher with the supplied screw A (rear side) and screw B (front side).

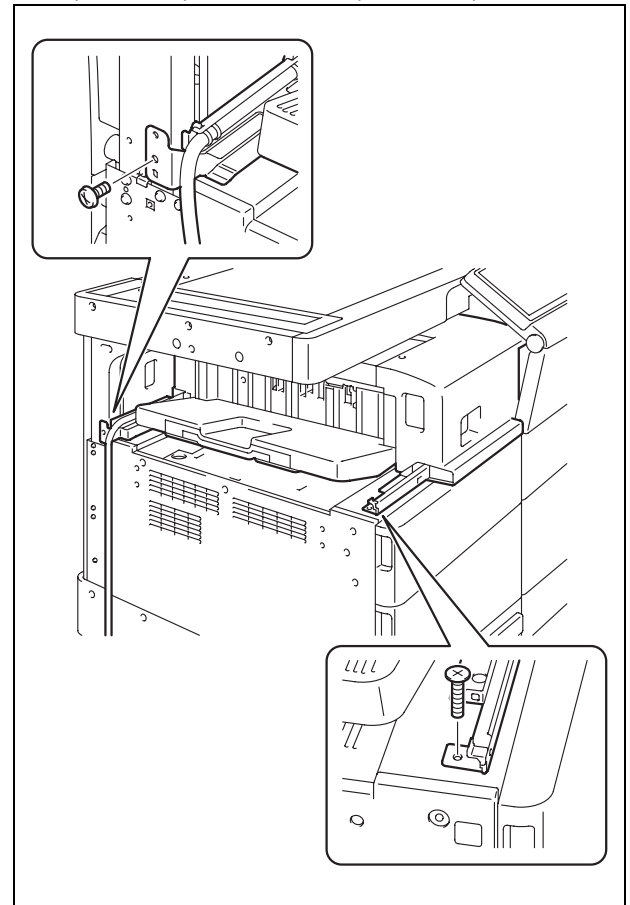


- (20) Slide the finisher by pulling the lever.


- (21) Place the supplied rail cover onto the rail of the finisher.

Note:


Make the finisher's harness come out from the rail cover at the position shown in the illustration.

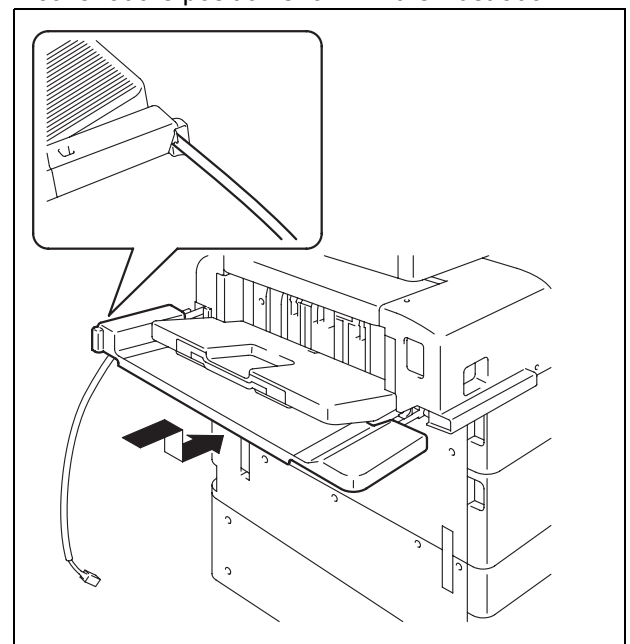


- (22) Secure the rail cover with the supplied screw C (front side) and the shoulder screw (rear side).

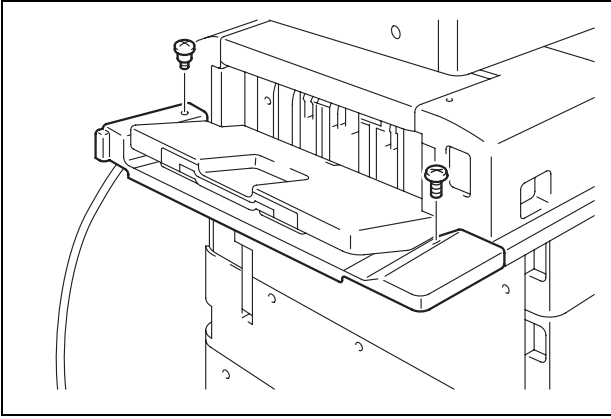

- (23) Remove the cover shown in the illustration from the rear of the main unit. (One screw)

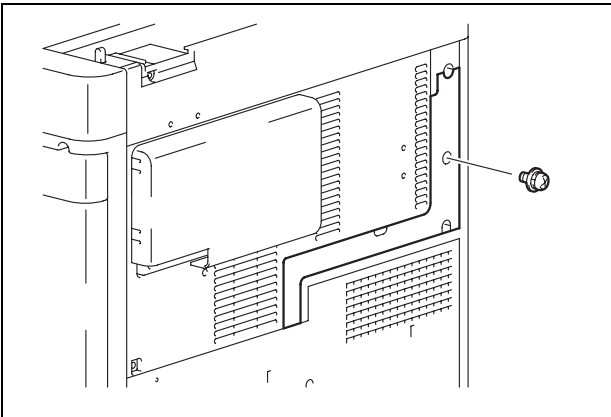


- (24) Plug in the two connectors of the finisher. Fit the head of the cable tie into the mounting hole on the main unit.

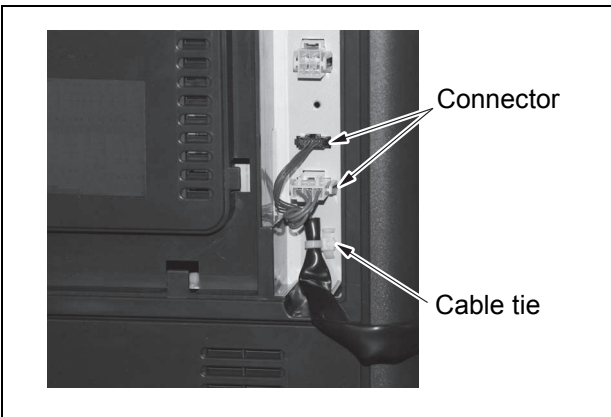

- (25) Reinstall the cover that have been removed in step (23). (One screw)

Note:

- Be careful not to pinch the harness.
- Insert two claws A into the holes on the main unit cover first. Then fit two claws B into the holes.

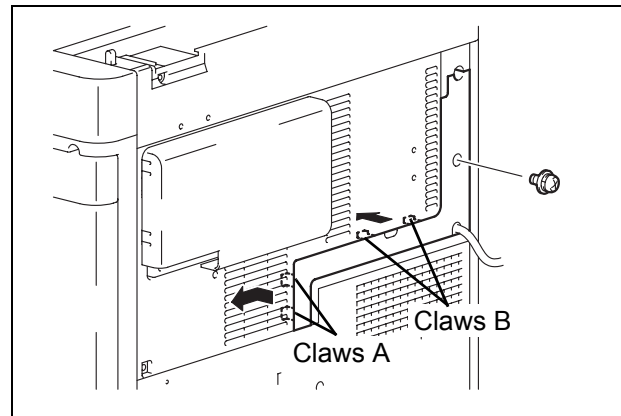

- (26) Reattach the rear left cover removed in step step (12) to the main unit. (Three screws)

- (27) Slide the finisher and affix the label to the position as shown in the illustration.

